


Preparing Graphic Artwork

For A Roller Blind to Be Fitted Inside The Window Recess

Using a metal tape measure, carefully measure the total width from A to B and the drop from C to D.

These are the dimensions you use when you place your order.

Check your measurement in several places to allow for any slight variation or irregularity in your window recess.

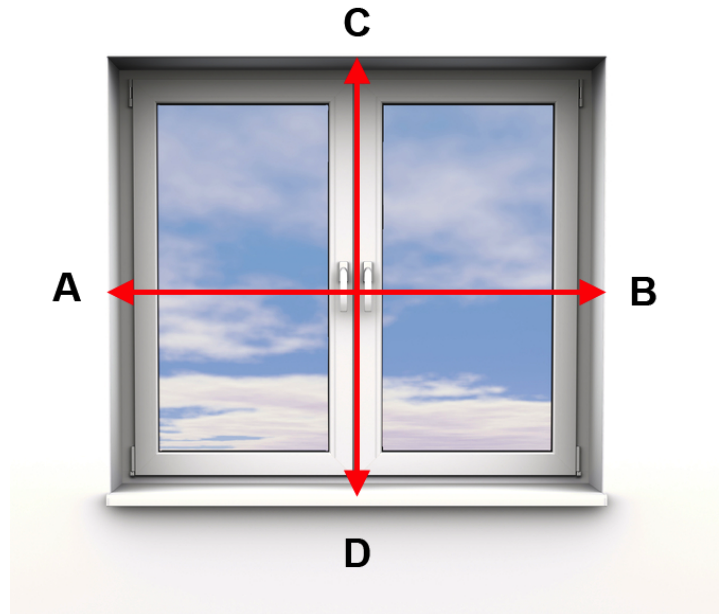

Preparing Your Artwork

Now subtract 30mm from the width A to B to allow for the brackets and sidewinder mechanism. This means the finished printed blind including sidewinder mechanism and brackets will equal your selected A to B width.

Now add a minimum of 120mm to the C to D drop measurement. This will allow 60mm for the roller fittings at the top and 60mm for the blind overhang at the bottom of the window.

Non-Visible Graphics

Please note that the top 100mm of your graphic will not be visible due to the roller fittings and the bottom 65mm will not be visible due to the bottom bar fixing.

- Please set-up your artwork at a minimum of 25% final size at 300dpi.
- If created in Photoshop then set-up at a minimum of 50% final size at 300dpi.
- We can accept artwork: InDesign, Illustrator, Photoshop and high resolution PDF. Allow the background image or colour to bleed into the non-visible area.
- Please do not add any crops or bleed to your artwork.

